

# OBH-W Recommended Installation Instructions

The following instructions are recommended for the installation of the OBH-W Centralizer


**Safety First! Wear appropriate PPE including eye protection and gloves.**

## Included


x1 OBH-W preassembled unit  
x2 2-3/4" Hinge pins

## Tools required

Locking pliers or similar to bend hinge pin

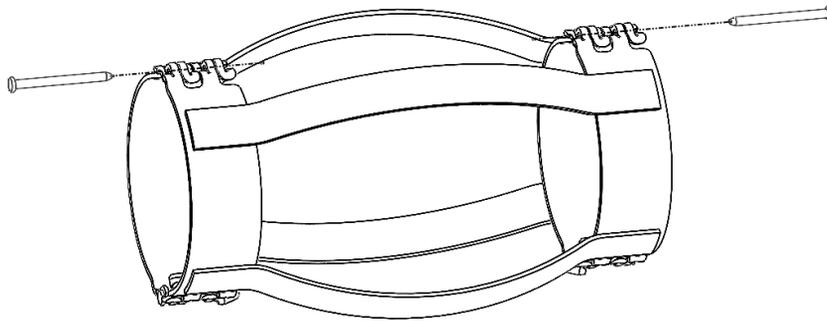


1.

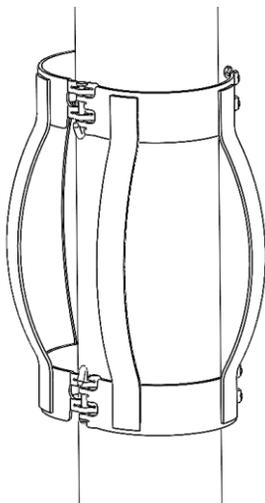


Hinge centralizer assembly onto casing

2.

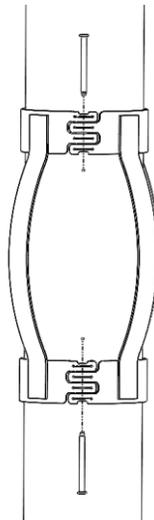

Insert second set of hinge pins

3.

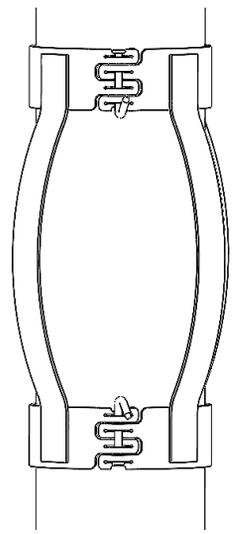

Bend hinge pins to secure centralizer onto casing

**IMPORTANT!** Centek do not recommend installation over stop collars or casing collars and doing so could affect the stated performance of the product